

CONTACT GRILL PANINI
MODEL CODE :PGT0001 R00

Part No.	Description
1	TOP COVER PLATE
2	TOP ELEMENT COVER PLATE
3	TOP ELEMENT 1000W 230V
4	TOP TOASTER CASTING
5	DRIP TRAY SINGLE FAT TRAY
6	THERMOSTAT
7	PILOT LIGHT
8	CONTROL KNOB
9	SCALE-BEZEL
10	CONTROL PANEL FACIA
11	OUTER ENCLOSURE
12	BOTTOM COVER PLATE
13	RUBBER FOOT
14	BOTTOM ELEMENT 1200W 230V
15	BOTTOM ELEMENT COVER PLATE
16	BOTTOM TOASTER CASTING
17	BOTTOM TOASTER CASTING COVER PLATE
18	SINGLE CONTACT GRILL STEEL HANDLE
19	METAL CONDUIT
20	HINGE AXLE FRONT
21	HINGE AXLE REAR
22	CERAMIC CONNECTOR BLOCK
23	POWER CORD
24	CABLE GLAND
25	HANDLE SPRING
26	CLAMPING SADDLE
27	SINGLE CONTACT GRILL PLASTIC HANDLE
28	HINGE AXLE CIRCLIP



WARNING

Electric Shock Hazard.

Keep water and other liquids from entering the inside of the equipment. Liquid inside the equipment could cause an electrical shock




Do not spray water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock. Do not use equipment if power cord is damaged or has been modified

SAFETY

READ ALL INSTRUCTIONS BEFORE USE. FAILURE TO FOLLOW THESE PRECAUTIONS COULD RESULT IN INJURY TO YOURSELF AND OTHERS

1. When this appliance is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finishes, etc. it is recommended that they be made of non-combustible material. If not, they shall be clad with a suitable non-combustible heat insulating material, and the closest attention be paid to fire prevention regulations.
2. The appliances are designed to operate on alternating current only (A.C.). **DO NOT CONNECT TO DIRECT CURRENT (D.C.).**
3. Care should be taken when operating the units as HOT SURFACES are present which may cause burns.
4. Ensure that the equipment and the power supply cord does not come into contact with hot surfaces.
5. Supervision is necessary when the appliance is used in close proximity to children.
6. If the supply cord is damaged, it must be replaced with a new cord assembly available from the suppliers agent.
7. Use only earthed outlets matching the serial plate voltage.
8. Have equipment installed by a qualified personnel in accordance with local codes and ordinances.
9. Use equipment in a flat level position.
10. Do not operate unattended
11. The equipment may be hot, even though the pilot light is not on.
12. Do not operate if equipment has been damaged or is malfunctioning in any way.

**POSITIONING DIAGRAM
PANINI CONTACT GRILLER - SINGLE
PGT0001**

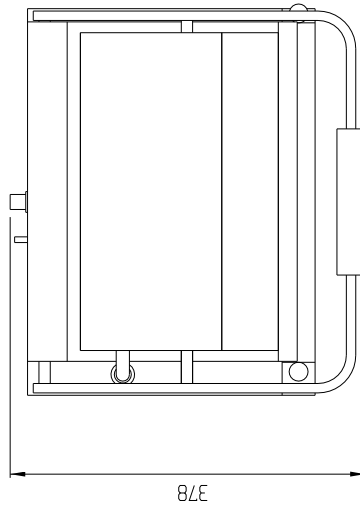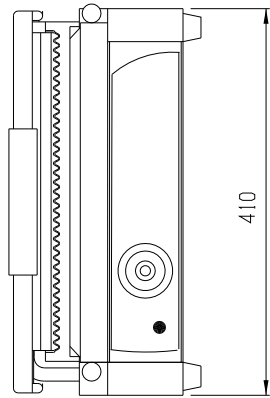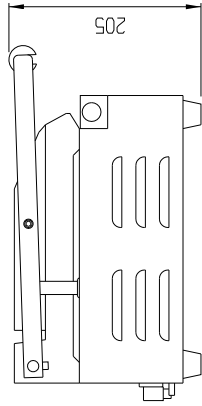

**EXPLODED DIAGRAM DIAGRAM
PANINI CONTACT GRILLER - SINGLE
PGT0001**

